



1

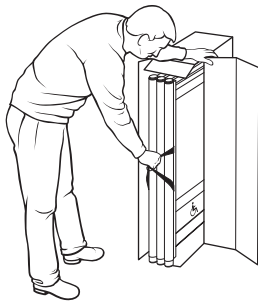


Carefully slide the booth out of the box. Remove by pulling on the fabric handles. Leave plenty of room for assembly.

2




Holding the handles and supporting the booth, rotate until the telescopic legs are facing upward.

3

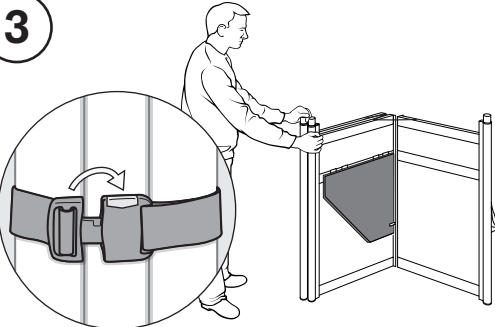


Undo the buckle by pressing the red button. Open out the first section.

4

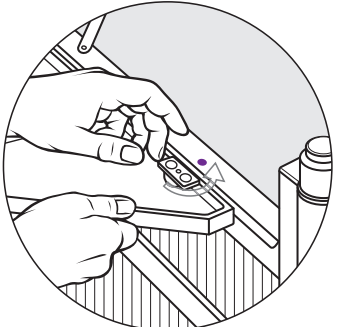


Rotate the yellow catch and raise the writing table. The edge of the writing table will engage with the cross rails.

5

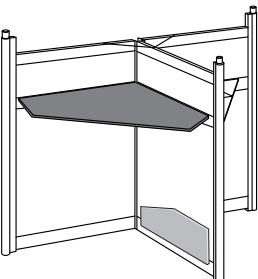


Repeat instruction 4 on the other section when it is opened out.

6

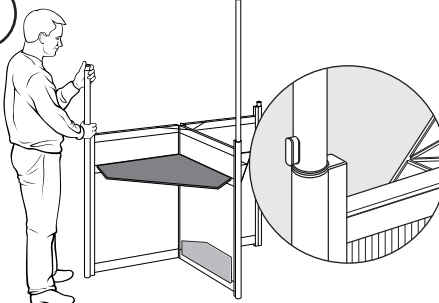

Extend each telescopic leg until the button pops out. Push the leg back in position so that it cannot be pushed in again accidentally.


7

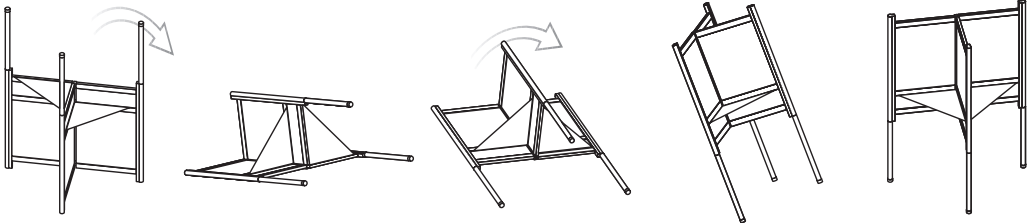

Leaving plenty of room, lower the booth until it is lying on its back. Raise the booth to its working position.


When dismantling the booth, simply repeat the instructions in reverse.

8

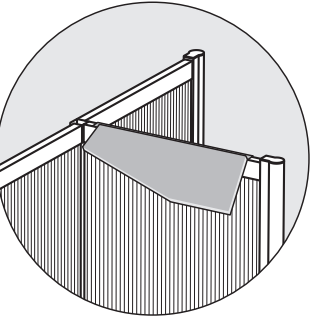


Rotate visors to their vertical working position.

9

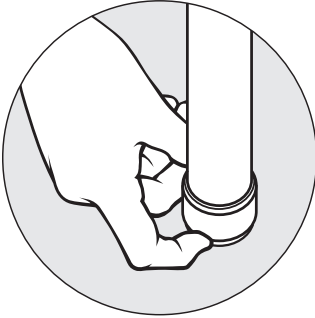


If necessary, use the adjusters at the bottom of each leg to level the booth.

10

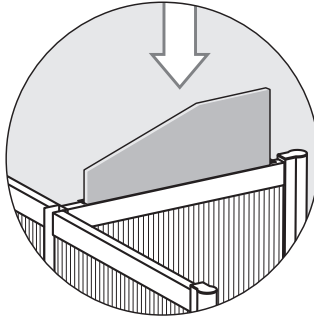

Attach the booth light to the visor and turn it on (if applicable).

11

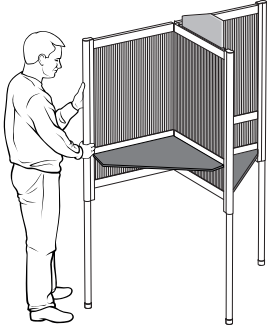

Give the booth one final check to make sure that all the shelves and leg buttons are properly locked.